

*Please note the **INTERCOM** function on the Quartet 1500 base unit will not work with your Quartet 1000 additional handset.*

The **PAGE** and the **INTERCOM** buttons cannot be used during a call.

## Transferring calls

You can transfer calls between handsets that are registered to the base unit.

### To transfer a call



- During your call press the **SECRECY** button and then the handset number that you want to transfer the call to.
- While the call is being transferred, only the caller will hear music.
- The called handset will ring.
- If the call is not answered within 30 seconds the calling handset will ring.
- If after a further 30 seconds the call is not taken the caller will be disconnected.

## General information

### Cleaning

Simply clean the handset with a damp cloth (not wet) or an antistatic wipe. Never use household sprays and cleansers as they can damage your Quartet 1000 Additional Handset.

### Product compliance

This product complies with R&TTE Directive (1999/5/EC).

This phone is designed for UK use only. Using it abroad may violate local radio laws.

### Guarantee

Subject to the terms listed below the guarantee will provide for the repair of, or at BT's or its agent's discretion, the option to replace the Quartet 1100 or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished product.

The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur 12 months from the date of purchase, provided that the equipment is sent to the repair address within this period.
- This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.
- This guarantee does not affect your statutory rights.

For further information refer to page 21 of the Quartet 1100 or page 34 of the Quartet 1500 User Guide

*If you experience any problems then please call the Quartet Helpline on **0845 769 7146**.*

### Mains power supply unit

The Quartet 1000 must only be used with the power supply unit supplied. Using any other power supply unit will result in non-compliance with EN60950:1992, and will invalidate the approval given to this apparatus.

It is not permitted to interfere with the main BT socket or wiring. If you have a problem, contact BT on Freefone **0800 800 151** for residential or Freefone **0800 800 154** for business lines.



**CE 0560** ⚠

CE compliant to R&TTE Directive (1999/5/EC)

### Offices worldwide

The telecommunications services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

*TouchTone™* is a registered trade mark of British Telecommunications plc in the UK.

© British Telecommunications plc 2000.  
Registered Office: 81 Newgate Street, London EC1A 7AJ.  
Registered in England No. 1800000.  
Quartet 1000. Issue 1 (9/00) 3.  
Designed by The Art & Design Partnership Limited.  
Printed in China by SunCorp Technologies.  
Printed on paper which meets international environmental standards.

 


# Quartet 1000

**Additional Handset & Charger**

# User Guide

**You will not be able to make or receive calls using additional handsets until they have been registered using your Quartet base unit. This handset will only work with the Quartet 1100 and 1500.**

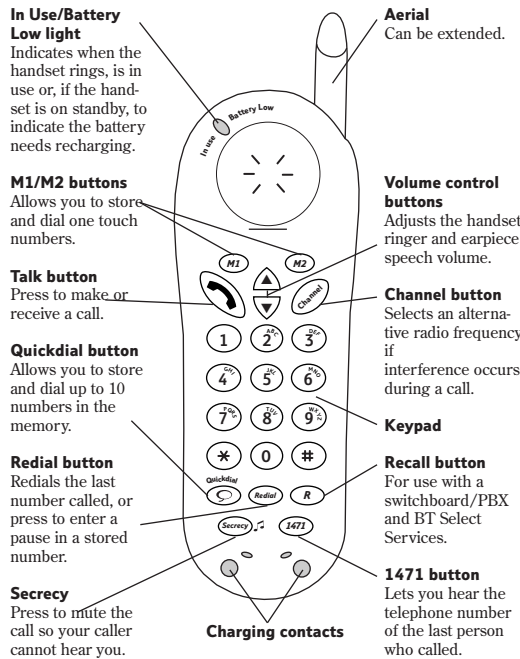

## 2 Connect the power supply unit into a convenient mains socket

## 3 Place the handset on the charging unit

Make sure the red **CHARGING** light at the front of the charging unit comes on.

## 4 Leave the handset to charge for 24 hours

*When fully charged and in good condition, the handset will provide up to 7 hours talktime or 72 hours standby.*

*If the handset battery is running low, the IN USE/BATTERY LOW light will flash every 10–15 seconds.*

*If you are making a call and the handset battery is running low you will hear a warning tone every 10–15 seconds.*

## Registering your handset

You must register your Quartet additional handset before it can be used with your Quartet base unit. Make sure that each additional handset is registered with a different number (2, 3 or 4) so it can be identified from other additional handsets, see page 3.

*The Quartet 1500 does not feature a **PAGE** button. When registering an additional handset to a base unit please use the base unit **INTERCOM** button.*

### To register an additional handset



- Place the handset you wish to register on the base unit and then remove it.
- Press and hold the base unit **PAGE** button for 5 seconds until both the POWER/IN USE light on the base unit and the IN USE/BATTERY LOW light on the handset begin to flash.
- Release the **PAGE** button and press the **TALK** button on the handset.
- Your additional handset is registered automatically and you will hear a long confirmation beep and the IN USE light will stop flashing.

### To re-register an additional handset

Before re-registering, the old registration code must first be erased. If necessary you can re-register your Quartet 1000 handset by simply following the above procedures.

### To erase a registration code



- Press the **QUICKDIAL** button
- Press the **CHANNEL** button.
- Press the ★ button 4 times.
- Press the **QUICKDIAL** button. You will hear a confirmation tone.

Your old registration code is now erased and you can re-register your Quartet 1000 handset following the procedure above.

*Check that your Quartet 1000 handset is registered correctly by pressing the **TALK** button and listening for a dial tone. If you do not hear a dial tone your Quartet 1000 handset is either out of range of the base unit or it has not been registered properly, or the base unit line cord is not plugged in.*

### To set the handset number

Each additional handset must be assigned an identity number (2, 3 or 4). Your Quartet 1100 or 1500 handset is already registered as HANDSET 1. A Quartet additional handset is pre-set as HANDSET 2. However, further additional handsets can be numbered as they are added.



- Press the **QUICKDIAL** button.
- Press the **SECRECY** button.
- Enter the handset number between (2 and 4).
- Press the **QUICKDIAL** button. You will hear a beep confirming that the new number has been stored.

*Make a note of the handset number by writing it on the quickdial label on the additional handset's charger.*

# Using your Quartet 1000 Additional Handset

Your Quartet 1000 can be used with the Quartet 1100 and Quartet 1500. Please refer to your main Quartet User Guide for a complete list of product features and operating instructions.

### To make an external call

Press the buttons in the order shown:




- Lift the handset off the base unit.
- Press the **TALK** button. The POWER/IN USE light on the base unit begins to flash and the IN USE light on the handset comes on.
- Listen for the dialling tone.
- Dial the number you want.

### To end a call



- Press the **TALK** button.
- Or
- Replace the handset on the base unit.

*The handset range is up to 250 metres from the base unit in ideal conditions. If you start to go out of range while using the phone, you will hear warning beeps. Move closer to the base unit. If you do not move back into range your call may be disconnected.*

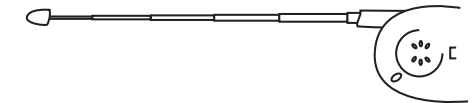

*Your Quartet 1000 additional handset uses a compact aerial which can be pulled out to obtain the best signal and reception available.*

### Page button – Quartet 1100


The Quartet 1100 base unit features a **PAGE** button. When pressed, the base unit and all the handsets registered to that base unit will ring and the IN USE/BATTERY LOW light on the handset will flash. The **PAGE** button feature does not enable conversation between the base unit and handset.

# Setting up

Follow these steps to get your Quartet 1000 additional handset ready for use.

*Like all cordless phones, your Quartet 1000 additional handset will need charging for 24 hours before use.*

### 1 Plug the power cable into the charging unit

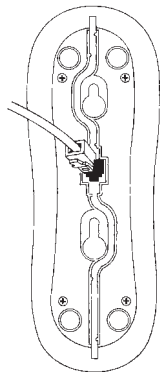

Plug the power cable into the socket located on the bottom of the charging unit, then feed the cable through the channel.



# ***Quartet 1000***

**Additional Handset & Charger**

## User Guide

You will not be able to make or receive calls using additional handsets until they have been registered using your Quartet base unit. This handset will only work with the Quartet 1100 and 1500.

**In Use/Battery Low light**

Indicates when the handset rings, is in use or, if the handset is on standby, to indicate the battery needs recharging.

**M1/M2 buttons**

Allows you to store and dial one touch numbers.

**Talk button**

Press to make or receive a call.

**Quickdial button**


Allows you to store and dial up to 10 numbers in the memory.

**Redial button**

Redials the last number called, or press to enter a pause in a stored number.

**Secrecy**

Press to mute the call so your caller cannot hear you.

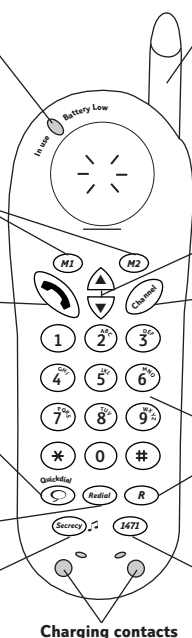

**Aerial**

Can be extended.

**Volume control buttons**

Adjusts the handset ringer and earpiece speech volume.

**Channel button**

Selects an alternative radio frequency if interference occurs during a call.

**Keypad**

**Recall button**

For use with a switchboard/PBX and BT Select Services.

**1471 button**

Lets you hear the telephone number of the last person who called.


*If you experience any problems then please call the Quartet Helpline on 0845 769 7146*

## Setting up

Follow these steps to get your Quartet 1000 additional handset ready for use.

*Like all cordless phones, your Quartet 1000 additional handset will need charging for 24 hours before use.*

### 1 Plug the power cable into the charging unit

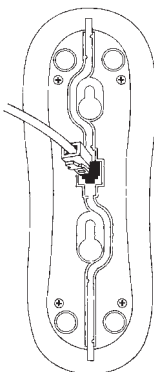

Plug the power cable into the socket located on the bottom of the charging unit, then feed the cable through the channel.

## 2 Connect the power supply unit into a convenient mains socket

## 3 Place the handset on the charging unit

Make sure the red **CHARGING** light at the front of the charging unit comes on.

## 4 Leave the handset to charge for 24 hours

*When fully charged and in good condition, the handset will provide up to 7 hours talktime or 72 hours standby.*

*If the handset battery is running low, the IN USE/BATTERY LOW light will flash every 10–15 seconds.*

*If you are making a call and the handset battery is running low you will hear a warning tone every 10–15 seconds.*

## Registering your handset

You must register your Quartet additional handset before it can be used with your Quartet base unit. Make sure that each additional handset is registered with a different number (2, 3 or 4) so it can be identified from other additional handsets, see page 3.

*The Quartet 1500 does not feature a **PAGE** button. When registering an additional handset to a base unit please use the base unit **INTERCOM** button.*

### To register an additional handset



- Place the handset you wish to register on the base unit and then remove it.
- Press *and hold* the base unit **PAGE** button for 5 seconds until both the POWER/IN USE light on the base unit and the IN USE/BATTERY LOW light on the handset begin to flash.
- *Release* the **PAGE** button and press the **TALK** button on the handset.
- Your additional handset is registered automatically and you will hear a long confirmation beep and the IN USE light will stop flashing.

## To re-register an additional handset

Before re-registering, the old registration code must first be erased. If necessary you can re-register your Quartet 1000 handset by simply following the above procedures.

## To erase a registration code



- Press the **QUICKDIAL** button
- Press the **CHANNEL** button. You will hear a tone.
- Press the **★** button 4 times.
- Press the **QUICKDIAL** button. You will hear a confirmation tone.

Your old registration code is now erased and you can re-register your Quartet 1000 handset following the procedure above.

*Check that your Quartet 1000 handset is registered correctly by pressing the **TALK** button and listening for a dial tone. If you do not hear a dial tone your Quartet 1000 handset is either out of range of the base unit or it has not been registered properly, or the base unit line cord is not plugged in.*

## To set the handset number

Each additional handset must be assigned an identity number (2, 3 or 4). Your Quartet 1100 or 1500 handset is already registered as HANDSET 1. A Quartet additional handset is pre-set as HANDSET 2. However, further additional handsets can be numbered as they are added.



- Press the **QUICKDIAL** button.
- Press the **SECRECY** button.
- Enter the handset number between (2 and 4).
- Press the **QUICKDIAL** button. You will hear a beep confirming that the new number has been stored.

*Make a note of the handset number by writing it on the quickdial label on the additional handset's charger.*

# Using your Quartet 1000 Additional Handset

Your Quartet 1000 can be used with the Quartet 1100 and Quartet 1500. Please refer to your main Quartet User Guide for a complete list of product features and operating instructions.

## To make an external call

*Press the buttons in the order shown:*



- Lift the handset off the base unit.
- Press the **TALK** button. The POWER/IN USE light on the base unit begins to flash and the IN USE light on the handset comes on.
- Listen for the dialling tone.
- Dial the number you want.

## To end a call




- Press the **TALK** button.

*Or*

- Replace the handset on the base unit.

*The handset range is up to 250 metres from the base unit in ideal conditions. If you start to go out of range while using the phone, you will hear warning beeps. Move closer to the base unit. If you do not move back into range your call may be disconnected.*

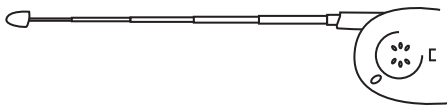

*Your Quartet 1000 additional handset uses a compact aerial which can be pulled out to obtain the best signal and reception available.*

## Page button – Quartet 1100

The Quartet 1100 base unit features a **PAGE** button. When pressed, the base unit and all the handsets registered to that base unit will ring and the IN USE/BATTERY LOW light on the handset will flash. The **PAGE** button feature does not enable conversation between the base unit and handset.

*Please note the **INTERCOM** function on the Quartet 1500 base unit will not work with your Quartet 1000 additional handset.*

The **PAGE** and the **INTERCOM** buttons cannot be used during a call.

## Transferring calls

You can transfer calls between handsets that are registered to the base unit.

### To transfer a call



- During your call press the **SECRECY** button and then the handset number that you want to transfer the call to.
- While the call is being transferred, only the caller will hear music.
- The called handset will ring.
- If the call is not answered within 30 seconds the calling handset will ring.
- If after a further 30 seconds the call is not taken the caller will be disconnected.

## General information

### Cleaning

Simply clean the handset with a damp cloth (not wet) or an antistatic wipe. Never use household sprays and cleansers as they can damage your Quartet 1000 Additional Handset.

### Product compliance

This product complies with R&TTE Directive (1999/5/EC).

This phone is designed for UK use only. Using it abroad may violate local radio laws.

### Guarantee

Subject to the terms listed below the guarantee will provide for the repair of, or at BT's or its agent's discretion, the option to replace the Quartet 1100 or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished product.



The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur 12 months from the date of purchase, provided that the equipment is sent to the repair address within this period.
- This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.
- This guarantee does not affect your statutory rights.

For further information refer to page 21 of the Quartet 1100 or page 34 of the Quartet 1500 User Guide

*If you experience any problems then please call the Quartet Helpline on **0845 769 7146**.*

### **Mains power supply unit**

The Quartet 1000 must only be used with the power supply unit supplied. Using any other power supply unit will result in non-compliance with EN60950:1992, and will invalidate the approval given to this apparatus.

It is not permitted to interfere with the main BT socket or wiring. If you have a problem, contact BT on Freefone **0800 800 151** for residential or Freefone **0800 800 154** for business lines.



**CE 0560** !

CE compliant to R&TTE Directive (1999/5/EC)

## Offices worldwide

The telecommunications services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

*TouchTone*<sup>™</sup> is a registered trade mark of British Telecommunications plc in the UK.

© British Telecommunications plc 2000.  
Registered Office: 81 Newgate Street, London EC1A 7AJ.  
Registered in England No. 1800000.  
Quartet 1000. Issue 1 (8/00) 3.  
Designed by The Art & Design Partnership Limited.  
Printed in China by SunCorp Technologies.  
Printed on paper which meets international environmental standards.